




DIVIDED BASKET + CHANGING PAD

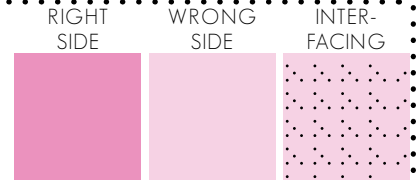


PRINT AND ASSEMBLE THE PDF PATTERN

USING STANDARD 8.5" X 11" (OR A4) PAPER, PRINT THE PATTERN PIECES IN ADOBE READER. IF YOU DO NOT HAVE THIS PROGRAM, PLEASE DOWNLOAD IT FOR FREE USING THIS LINK: [HTTPS://GET.ADOBE.COM/READER/](https://get.adobe.com/reader/) BE SURE TO SELECT "NO PAGE SCALING" OR "100%" WHEN PRINTING SO THE PATTERN PIECES WILL PRINT TRUE TO SIZE (SEE FIGURE BELOW). YOU CAN CHECK YOUR PAGE SCALING ON THE FIRST PATTERN PIECE PAGE WITH THE 1" X 1" OR 5 CM X 5 CM BOXES (SEE FIGURE BELOW).

TRIM AROUND THE EDGES OF THE PAGES USING THE BLACK LINES AS A GUIDE AND TAPE THE PATTERN PIECES TOGETHER BY ALIGNING THE NUMBERED BOXES IN THE CORNERS. I LIKE TO ONLY TRIM ALONG THE TOP AND LEFT SIDE OF EACH PAGE FOR EASIER TAPING (SEE FIGURE ON PAGE 3 FOR LAYOUT GUIDE).

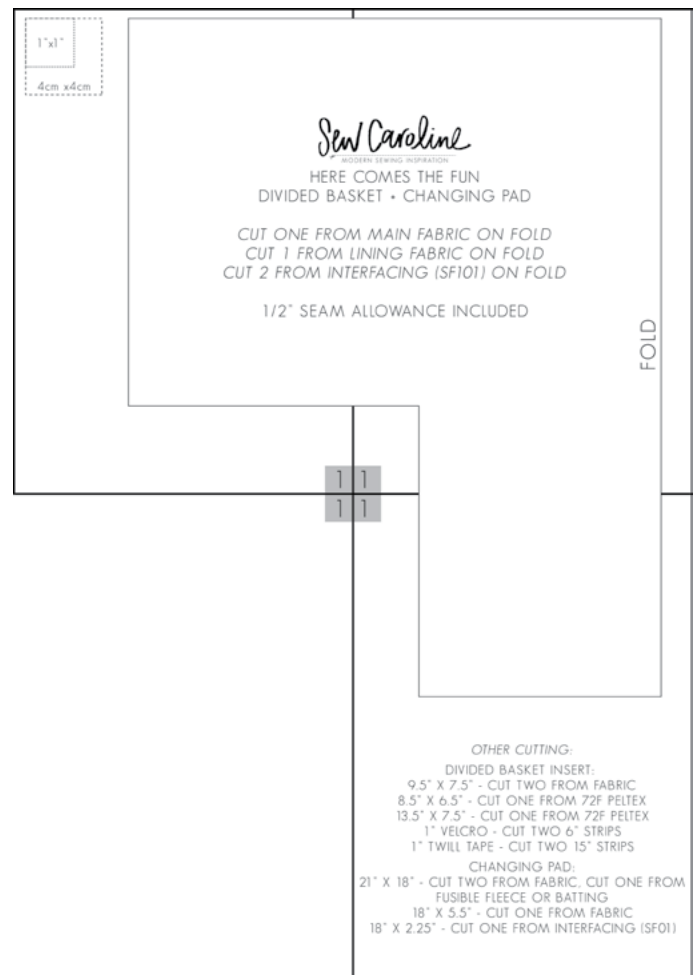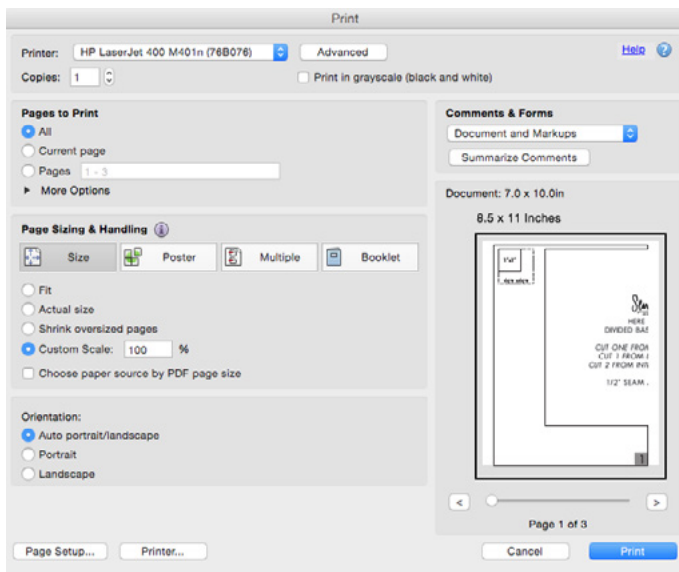

DIVIDED BASKET +
CHANGING PAD

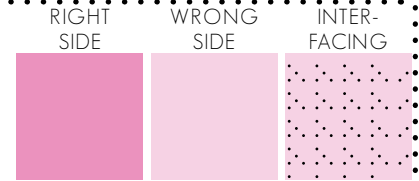

MATERIALS NEEDED FOR DIVIDED BASKET

- 1/2 YARD MAIN FABRIC
- 1/2 YARD LINING FABRIC
- 1 YARD LIGHTWEIGHT INTERFACING (PELLON SF101)
- 1/2 YARD HEAVY WEIGHT INTERFACING (72F PELTEX)
- 1" VELCRO (1/2 YARD)
- 1" TWILL TAPE (1 YARD)
- 4 SETS OF 1/2" METAL GROMMETS

MATERIALS NEEDED FOR CHANGING PAD

- 5/8 YARD MAIN FABRIC
- 1/2 YARD BATTING OR FUSIBLE FLEECE
- 1/8 YARD LIGHTWEIGHT INTERFACING (PELLON SF101)
- [1 KAM SNAP SET](#)

CUTTING INSTRUCTIONS FOR DIVIDED BASKET


- CUT ONE FROM MAIN ON FOLD (PATTERN PIECE)
- CUT ONE FROM LINING ON FOLD (PATTERN PIECE)
- CUT TWO FROM INTERFACING ON FOLD (PATTERN PIECE)
- 9.5" X 7.5" - CUT TWO FROM FABRIC
- 8.5" X 6.5" - CUT ONE FROM 72F PELTEX
- 13.5" X 7.5" - CUT ONE FROM 72F PELTEX
- 1" VELCRO - CUT TWO 6" STRIPS
- 1" TWILL TAPE - CUT TWO 15" STRIPS

CUTTING INSTRUCTIONS FOR DIVIDED BASKET



- 21" X 18" - CUT TWO FROM FABRIC, CUT ONE FROM FUSIBLE FLEECE OR BATTING
- 18" X 5.5" - CUT ONE FROM FABRIC
- 18" X 2.25" - CUT ONE FROM INTERFACING (SF01)

SEWING INSTRUCTIONS FOR DIVIDED BASKET

1. ADD ALL INTERFACINGS TO THE WRONG SIDE OF YOUR FABRICS.
2. PLACE TWO MAIN PIECES RIGHT SIDES TOGETHER AND SEW ALONG THE TWO SIDES AND THE BOTTOM USING A 1/2" SEAM ALLOWANCE. REPEAT THIS FOR THE LINING PIECES.

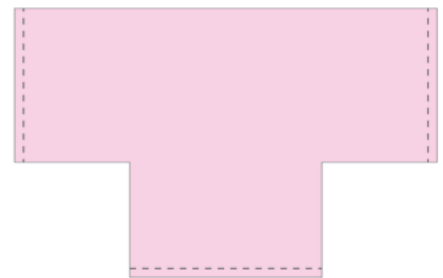


DIVIDED BASKET +
CHANGING PAD

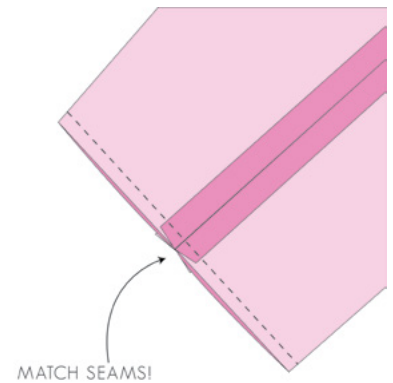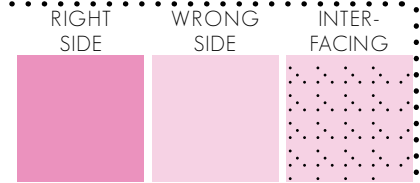


3. ALIGN THE SIDE SEAM WITH THE BOTTOM SEAM WITH RIGHT SIDES FACING. STITCH IN PLACE. REPEAT FOR THE LINING. THIS CREATES A BOXED BASKET BOTTOM.

4. STAND THE BASKET AND THE BASKET LINING UP SO THAT THE BASKET IS RIGHT SIDE FACING OUT AND THE BASKET LINING IS WRONG SIDE FACING OUT. PRESS THE TOP EDGE OF THE BASKET AND BASKET LINING TOWARDS THE WRONG SIDE AT 1/2" AND PLACE THE BASKET LINING INSIDE THE BAG. INSERT THE HEAVYWEIGHT INTERFACING (13.5" X 7.5") INTO THE BOTTOM OF THE BASKET BETWEEN THE TWO LAYERS. TOPSTITCH AROUND THE TOP OF THE BASKET.

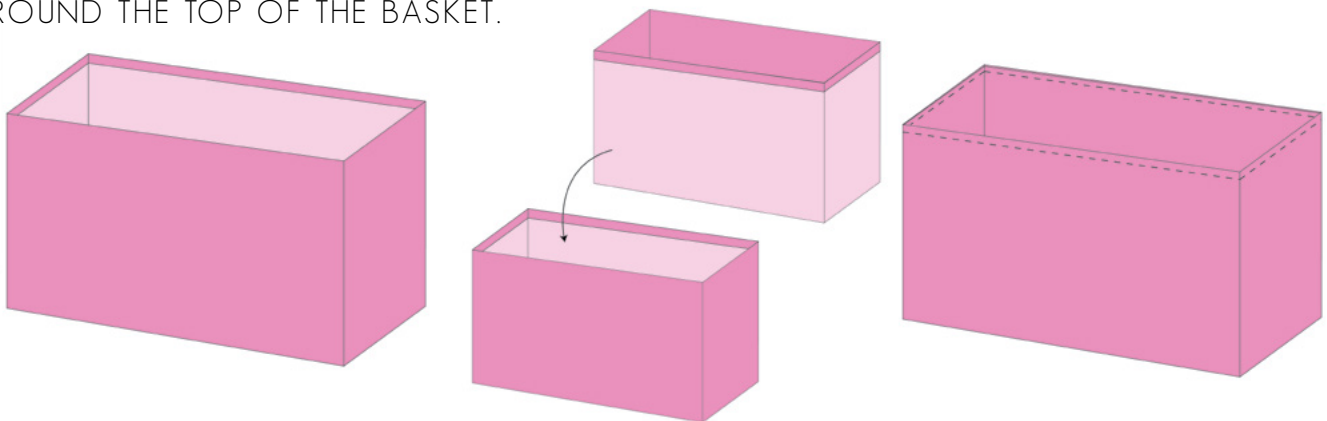


5. FIND THE CENTER ALONG THE LONG SIDE OF THE BAG AND SEW THE LOOP SIDE OF THE VELCRO STRIPS TO EACH SIDE CENTER ON THE INSIDE OF THE BASKET.



6. ON THE SIDE EDGES, MARK TWO SPOTS FOR METAL GROMMETS AND USING THE INSTRUCTIONS ON THE PACKAGING, INSERT THEM. THEY SHOULD BE A FEW INCHES APART. REPEAT FOR THE OTHER SIDE EDGE. INSERT THE TWILL TAPE AND TIE THE ENDS OFF WITH A KNIT TO SECURE.

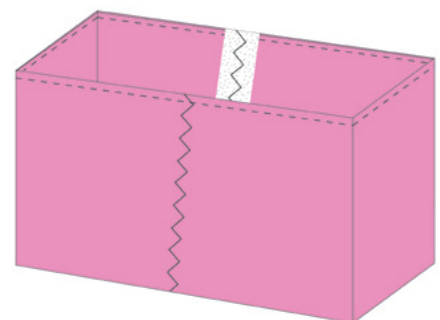

DIVIDED BASKET +
CHANGING PAD

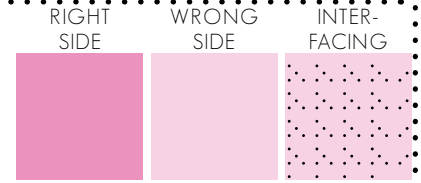

7. TAKE THE TWO RECTANGLES AND PLACE THEM RIGHT SIDES TOGETHER. SEW ALONG THREE SIDES AND SNIP THE CORNERS. FLIP TO THE RIGHT SIDE AND INSERT THE HEAVY WEIGHT INTERFACING. FOLD THE RAW EDGE IN AND TOPSTITCH ALL THE WAY AROUND. SEW THE HOOK STRIPS OF VELCRO TO THE ENDS, ONE ON EACH SIDE (SO WHEN IT IS VELCRO-ED INTO THE BASKET IT MAKES AN "S" SHAPE).

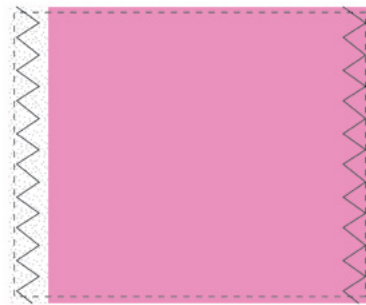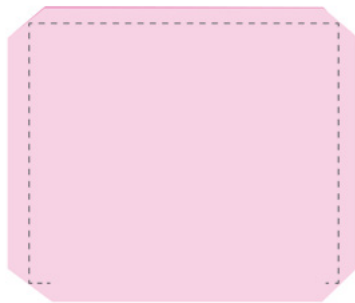

SEWING INSTRUCTIONS FOR CHANGING PAD

1. TAKE THE LONG STRIP AND INTERFACE ONE LONG EDGE.



2. FOLD THIS STRIP IN HALF LONG WAYS WITH RIGHT SIDES TOGETHER, STITCH DOWN THE LONG EDGE, FLIP TO THE RIGHT SIDE AND PRESS. FOLD ONE END IN TOWARDS THE WRONG SIDE AT 1/2" AND TOP STITCH.



3. PLACE ONE PART OF THE KAM SNAP CENTERED ON THE EDGE THAT WAS FINISHED. PLACE THE OTHER KAM SNAP CENTERED 7" FROM THE UNFINISHED EDGE.



DIVIDED BASKET +
CHANGING PAD

RIGHT
SIDE



WRONG
SIDE

INTER-
FACING



4. BASTE OR FUSE THE BATTING OF FUSIBLE FLEECE TO ONE OF THE RECTANGLES ON THE WRONG SIDE. PLACE RIGHT SIDES TOGETHER AND SEW ALMOST ALL THE WAY AROUND LEAVING THE BOTTOM 1/3 OF THE CHANGING PAD OPEN. CLIP CORNERS, TURN TO THE RIGHT SIDE AND PRESS

5. INSERT THE UNFINISHED END OF THE STRAP INTO THE OPENING. FOLD THE RAW EDGES IN AND TOP STITCH ALL THE WAY AROUND. DIVIDE THE CHANGING PAD INTO THIRDS AND TOPSTITCH ALONG THESE CREASE LINES.

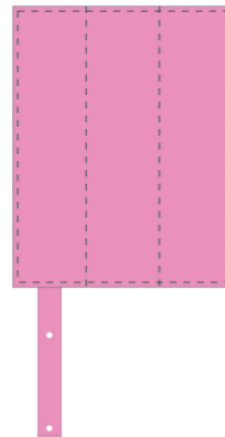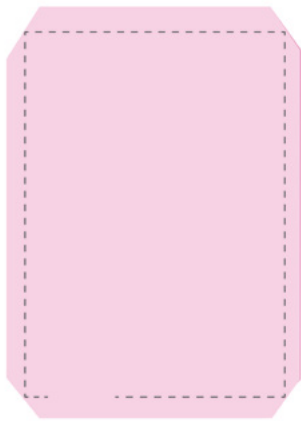

1" x 1"

4cm x 4cm

Stitch
MO

HERE
DIVIDED BAS

CUT ONE FROM
CUT 1 FROM L
CUT 2 FROM INT

1/2" SEAM

1 Caroline


MODERN SEWING INSPIRATION

COMES THE FUN
BASKET + CHANGING PAD

1 MAIN FABRIC ON FOLD
1 LINING FABRIC ON FOLD
1 INTERFACING (SF101) ON FOLD

ALLOWANCE INCLUDED

FOLD



OTHER CUTTING:

DIVIDED BASKET INSERT:

- 9.5" X 7.5" - CUT TWO FROM FABRIC
- 8.5" X 6.5" - CUT ONE FROM 72F PELTEX
- 13.5" X 7.5" - CUT ONE FROM 72F PELTEX
- 1" VELCRO - CUT TWO 6" STRIPS
- 1" TWILL TAPE - CUT TWO 15" STRIPS

CHANGING PAD:

- 21" X 18" - CUT TWO FROM FABRIC, CUT ONE FROM FUSIBLE FLEECE OR BATTING
- 18" X 5.5" - CUT ONE FROM FABRIC
- 18" X 2.25" - CUT ONE FROM INTERFACING (SF01)