


Continental M17 v2.00 update:

(For **Windows** users)


This update can be used for CM17 versions 1.00, 1.01, 1.10.


Please click this link: <https://drive.google.com/file/d/1F0NjeSKbV5PxsmtGbICls-cSdk6AD1iA/view?usp=sharing> then click on the download arrow in the upper right corner of

the window (shown here =>) 

You may see a warning that Google cannot scan or preview the file ---- please ignore this and simply download the file.

The file must be downloaded onto **your computer**, **NOT** onto a USB stick.

Once the file has been downloaded, you will need to unzip the file  UpdateCM17v200. Locate the file, then click **once** to highlight the file, now click “**Extract**”, then “**Extract all**” OR “Extract all” for Windows 11 users.

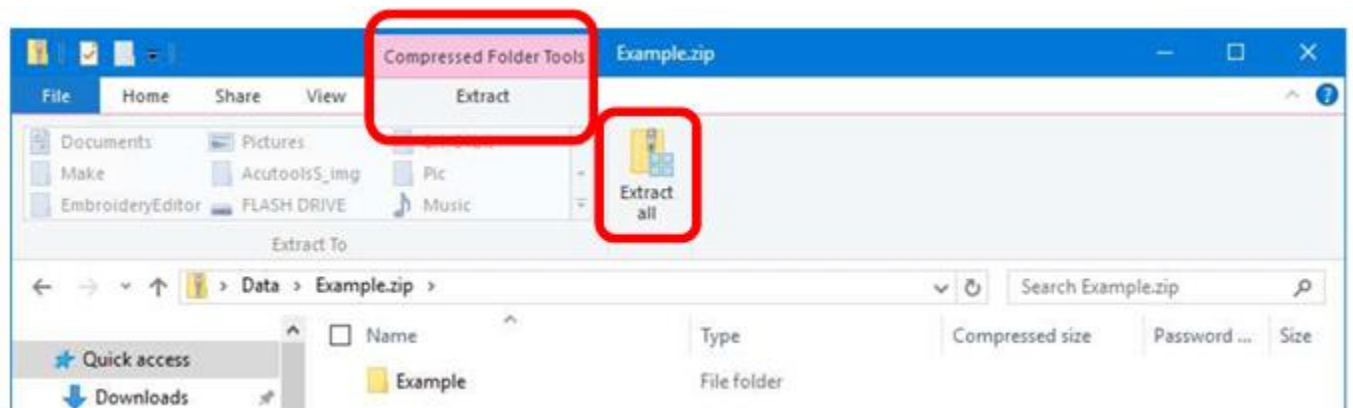

Once the file has been unzipped, open the folder  UpdateCM17v200 you will see the files below:







The file named “**update.bin**” OR “**update**” is the file needed for the update. (If the file extension “.bin” is not visible do not worry, this means you do not have the file extensions turned on in your File Explorer options).

*****CAUTION – DO NOT DOUBLE-CLICK ON OR TRY TO OPEN “UPDATE.BIN” YOU COULD POSSIBLY CORRUPT THE FILE.**


The USB v2.0 or higher should be used. *Absolutely no other folders or files should be on the USB stick.*

You should simply right-click over the file, then **copy/paste** “**update.bin**” onto a clean USB 2.0 or higher flash drive making sure **update.bin** is **NOT** inside of any folder, the file must be on the **root** of the USB stick.

Do not worry if your “bin” file shows a different icon or does not show the file extension, this can differ from PC to PC.

Name	Size	Type
 SYSTEM UPDATE VERSION 2.00 FOR CONTINENTAL M17_DU.pdf	315 KB	Adobe Acr...
 SYSTEM UPDATE VERSION 2.00 FOR CONTINENTAL M17_EN.pdf	329 KB	Adobe Acr...
 SYSTEM UPDATE VERSION 2.00 FOR CONTINENTAL M17_FR.pdf	326 KB	Adobe Acr...
 SYSTEM UPDATE VERSION 2.00 FOR CONTINENTAL M17_GE.pdf	318 KB	Adobe Acr...
 SYSTEM UPDATE VERSION 2.00 FOR CONTINENTAL M17_SP.pdf	314 KB	Adobe Acr...
 update.bin	38,911 KB	BIN File

Once **update.bin** is on the USB stick, you can now eject the USB drive by “**Safely Remove Hardware and Eject Media**” icon on the Taskbar (see image below).

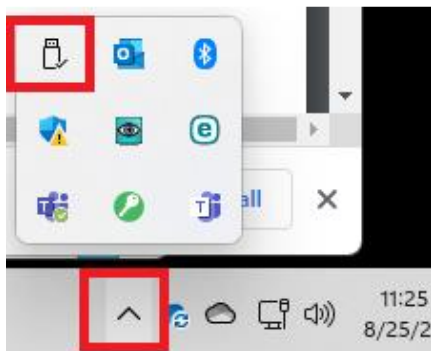

You can now carry out the machine update by referring to **STEP 4** in the “**SYSTEM UPDATE VERSION 2.00 FOR CONTINENTAL M17_EN**” document (highlighted above) **which is part of the file download.**

For more CM17 information you can visit the Global site here:

<https://www7.janome.co.jp/global/product/machineupdates/>

Notes:

ver.2.00

- Compatibility with 9-Hole Cording Foot added
- User Interface modifications/improvements to enhance usability
- Resolves minor issues from the previous version

ver. 1.10

- Reduction of resume time in Normal Sewing mode
- Improvements regarding embroidery file access when USB flash drives are inserted in machine
- Resolves minor issues from the previous version

ver. 1.01

- Add buttons on the screen panel to move the hoop socket of the embroidery unit to the center position while the carriage is returning to the left side
- Resolves minor issues from the previous version